



200W HMI Super Sun-Gun Disassembly Procedure

MODEL: SSG-200

IMPORTANT - READ FIRST!

 **EXTREMELY HIGH VOLTAGE!**
DISCONNECT THE LAMP HEAD FROM
THE BALLAST BEFORE DISASSEMBLING.

 **HIGH TEMPERATURE ON
BULB & LAMP HEAD !**
LET LAMP COOL SUFFICIENTLY PRIOR TO
DISASSEMBLY TO AVOID BURNS.

TOOLS REQUIRED FOR DISASSEMBLY


- 1 QUALITY #1 PHILIPS SCREW DRIVER
- 2 CLEAN LINT FREE CLOTH
- 3 CLEAN WORK AREA
- 4 SOLDERING IRON - IF REPLACING COMPONENTS




5 VALLEY STREET
HAWTHORNE, NJ 07506 USA
[HTTP://WWW.FREZZI.COM](http://www.frezzi.com)
E-MAIL FREZZI@FREZZI.COM
PHONE: (973) 427-1160
FAX: (973) 427-0934

DISASSEMBLY PROCEDURES MAIN CHASSIS

1. DISCONNECT LAMP CABLE FROM BALLAST.
2. REMOVE SAFETY GLASS BY PULLING RELEASE PIN.

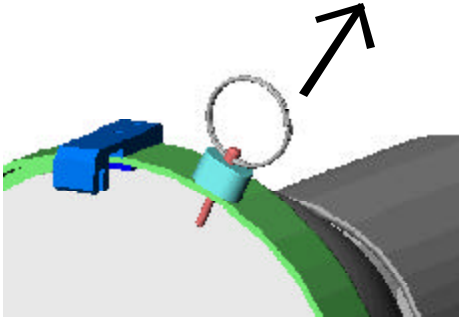

3. REMOVE BULB WITH A CLEAN LINT FREE CLOTH.
(DO NOT TOUCH BULB WITH BARE FINGERS)
4. REMOVE ROUND FOCUS KNOB BY UNSCREWING CCW.
5. REMOVE 3 OUTSIDE SCREWS ON BACK FACE, 120 DEG. APART.
6. UNSCREW SIDE HANDLE ALMOST ALL THE WAY.
7. CAREFULLY LIFT REAR HOUSING AWAY FROM BELL SHAPED HOUSING.
8. SEPERATE SAFETY SWITCH INLINE CONNECTORS.

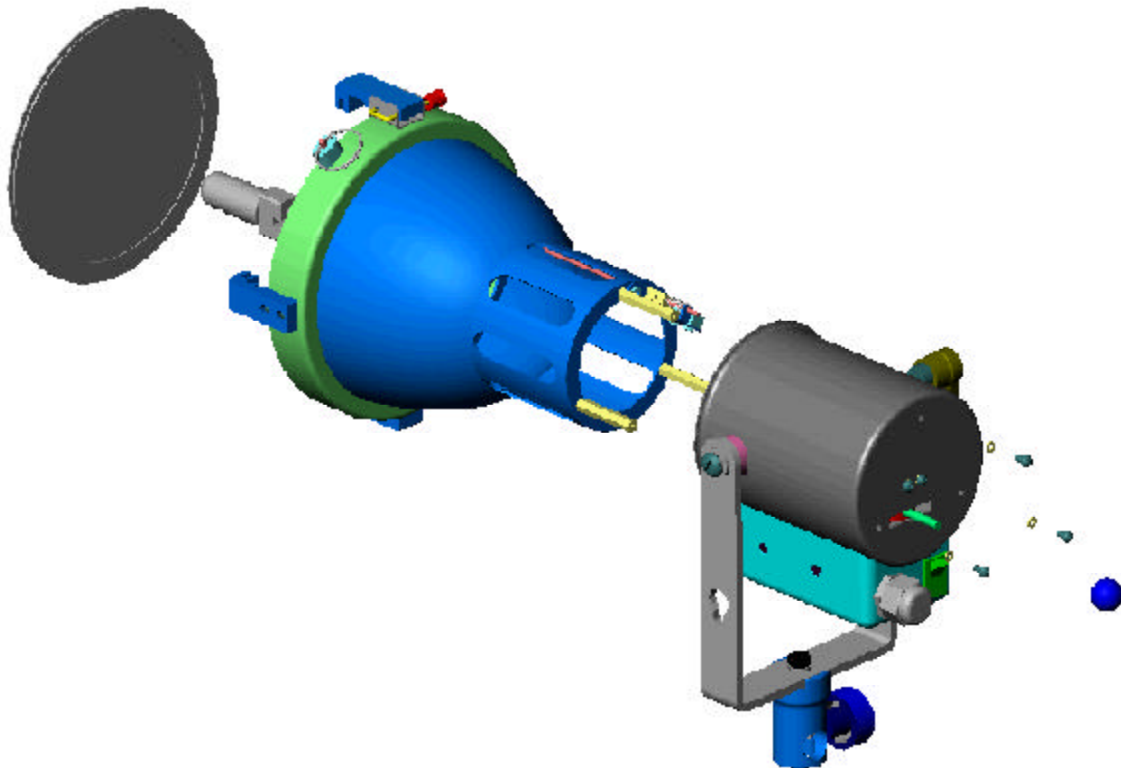


DISASSEMBLY PROCEDURE - IGNITOR BOX

9. REMOVE QTY. 4 FLAT HEAD SCREWS FROM IGNITOR BOX. (2 EACH SIDE)

10. PULL DOWN IGNITOR CHASSIS FROM REAR HOUSING TO EXPOSE IGNITOR.

11. REMOVE QTY. 2 PAN HEAD SCREWS THAT HOLD THE IGNITOR TO THE REAR HOUSING.

12. USE A SOLDERING IRON TO REPLACE THE IGNITOR IF REQUIRED.

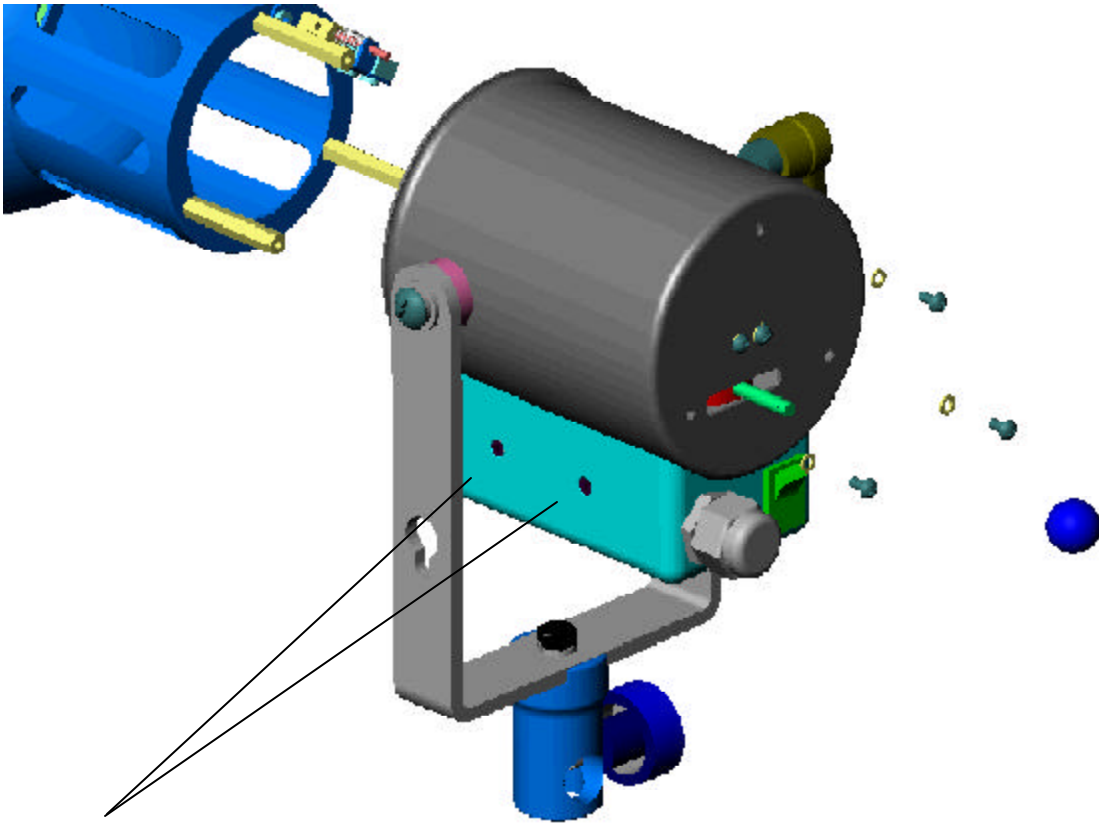

REMOVE QTY. 4 SCREWS TO DISASSEMBLY IGNITOR CHASSIS