







# Frezzi 200W HMI Quick Start Guide

<p>1 UNPACK THE 200W LAMP HEAD, 200W MSR BULB, BALLAST AND CABLES ALL PACKED SEPARATELY.</p> <p><b><u>DO NOT CONNECT AT THIS TIME.</u></b></p> <p>READ OWNER'S MANUAL FOR SAFETY NOTICES.</p>	
<p>2 REMOVE SAFETY GLASS BY PULLING UP RELEASE PIN TO INSTALL BULB.</p> <p>CAREFULLY TAKE OUT SAFETY GLASS HOLDING BY THE EDGES.</p> <p>AVOID FINGER PRINTS ON GLASS.</p>	
<p>3 REMOVE BULB FROM SHIPPING BOX &amp; INSERT INTO LAMP HEAD WITH A CLEAN CLOTH OR PLASTIC BAG. <b><u>DO NOT TOUCH BULB WITH FINGERS!</u></b></p> <p>PRESS BULB FIRMLY INTO SOCKET WHILE HOLDING THE FOCUS SHAFT, LOCATED ON THE BACK OF THE LAMP HEAD, IN FLOOD POSITION.</p>	
<p>4 RE-INSTALL SAFETY GLASS BY SEATING BEHIND 1/2" METAL TAB LOCATED IN THE 6:00 POSITION ON THE LAMP HEAD.</p> <p>PUSH SAFETY GLASS IN WHILE PULLING UP RELEASE PIN SO RELEASE PIN IS FULLY IN <b><u>FRONT</u></b> OF DOUBLE SAFETY GLASS RINGS.</p>	
<p>5 CONNECT LAMP HEAD TO BALLAST WITH 7 PIN CIRCULAR CONNECTOR AND TWIST LOCKING OUTER SHELL.</p> <p>CONNECT AC LINE CORD TO AC BALLAST AND AC LINE CORD TO POWER SOURCE.</p>	
<p>6 TURN THE POWER SWITCH TO THE "ON" POSITION ON THE AC BALLAST. TURN THE SWITCH ON THE LAMP HEAD TO THE "ON" OR "1" POSITION TO IGNITE THE LAMP.</p> <p>WAIT 60 SECONDS FOR FULL INTENSITY.</p> <p>NOTE: TO EXTEND BULB LIFE, ALLOW BULB TO FULLY WARM UP BEFORE TURNING BACK OFF.</p>	

## IF LAMP HEAD DOES NOT IGNITE, PLEASE CHECK THE FOLLOWING

1. CHECK **STEP 4.** - LOCKING PIN MUST BE SECURE ABOVE SAFETY GLASS.
2. BALLAST HAS POWER INDICATED BY THE FRONT PANEL LED & SWITCH IS ON .
3. LAMP HEAD SWITCH IS IN THE ON POSITION.
4. TURN OFF POWER AND DISCONNECT LAMP FROM BALLAST AND BALLAST FROM POWER. CHECK BULB IS FIRMLY SEATED IN POSITION.

IF LAMP STILL DOES NOT IGNITE, PLEASE CONTACT FREZZI SERVICE AT  
(973) 427-1160 BETWEEN 8:00AM AND 5:00PM EST. OR E-MAIL US AT [frezzi@frezzi.com](mailto:frezzi@frezzi.com).