


IMPORTANT - READ THIS FIRST!

1. DISCONNECT ALL CABLES PRIOR TO RELAMPING.

2. RETAINING PIN MUST BE FULLY SEATED OVER THE DOUBLE RINGS OF THE FRONT SAFETY GLASS FOR OPERATION.

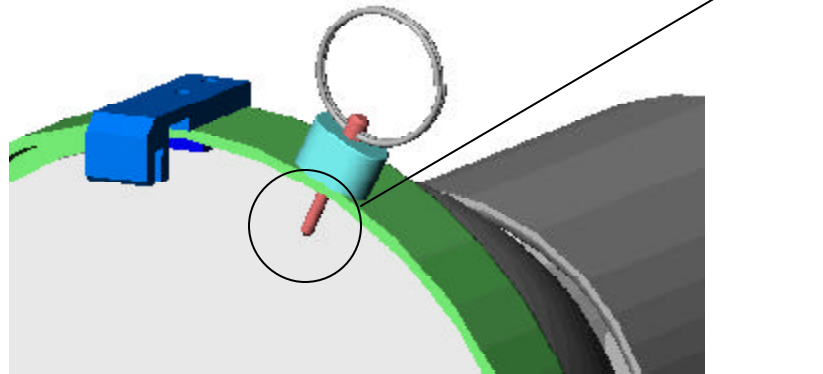

3. LET LAMP RUN FOR 5 MINUTES BEFORE TURNING OFF.

RAPID ON-OFF CYCLING WILL SHORTEN BULB LIFE!

4. BULB MUST BE REMOVED PRIOR TO SHIPPING LAMP HEAD.

5. READ MANUAL PRIOR TO USING LAMP.